




Magnetix Keyboard Case **for iPad**

Magnetix Keyboard Manual **with Stylus Shortcuts**

## Power Switch



## Pixel Tablet Pairing



Press **Fn + C**. When the blue indicator light in the lower right corner of the keyboard flashes, turn on the iPad, access Bluetooth, and connect to "eiP Keyboard".

## Backlight Adjustment



Press **Fn + Shift** to switch brightness (4 stages)




Press **Fn + Enter** to switch colors



## First time settings


### Trackpad Setting

Turn on - Tap to Click & Two Finger Secondary Click .

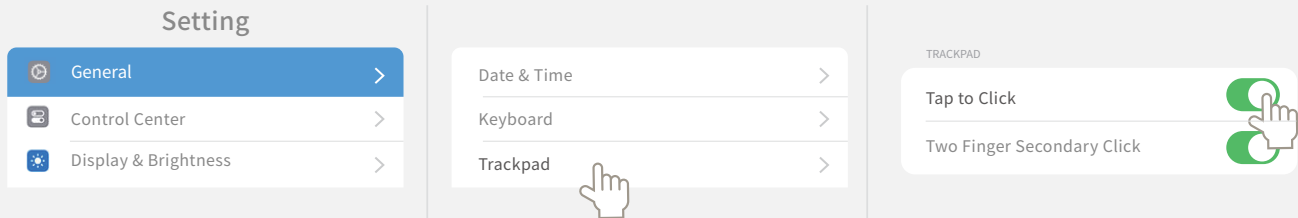

### Globe Key Setting


The default setting of the Globe key is a shortcut for Emoji.  
Turning it off allows you to switch between keyboard input languages.

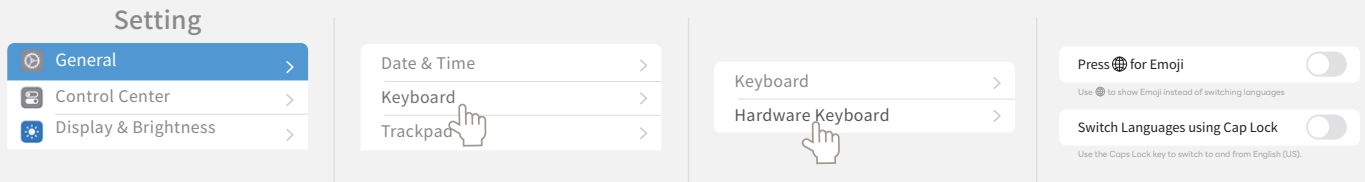

Globe key + E is the shortcut for Emoji .

### Caps Lock Setting

The default setting of Caps Lock is to switch between keyboard input languages.  
Turning it off allows you to capitalize letters when typing.

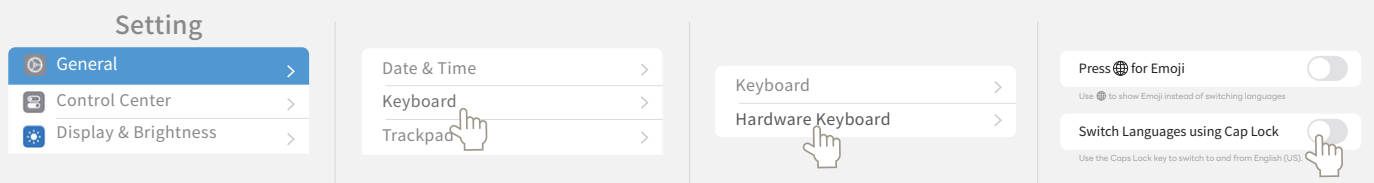


## Shortcut Buttons




Homepage



Brightness Down



Brightness Up



Screenshot




Virtual Keyboard



Siri




App Switcher



Volume Down



Volume Up



Lock Screen  
(Hold for 2 sec)



+



Press **Fn + Space** at the same time to **turn on/off** the trackpad

## Stylus Shortcut:


The current stylus shortcut keys only support Goodnotes and Notability.



Pen



Highlighter



Eraser



Activate Stylus Shortcut

Press "Fn + eiP" to activate the stylus shortcut function.  
(Red light will flash once to indicate successful activation)

※ Only for Notability/Goodnotes

※ After switching apps, you need to press "Fn + eiP" again to activate the shortcut function


## Trackpad Gesture

1. The keyboard charging port is TYPE-C charging port, the input of the voltage can not exceed DC-5V the keyboard will be broken if the voltage exceed the limit.
2. Connect the TYPE-C plug of the charging cable to the keyboard charging socket the other side is connected to the charger of the tablet PC or the charging interface of the tablet PC charges the keyboard.
3. Please charge it for at least 3 hours before using for the first time and then charging at least 2 hours when it is low battery in the future.
4. The green indicator light flashes: low battery, please charge it on time.
5. When charging, please check whether the charging port is powered normally.

Note : Please do not charge the keyboard for a long time. Keeping it plugged in for a long time will deplete the keyboard's battery life.

## How to check battery status?

Press on the blank space until the apps are shaking, find the “+” at the left top corner. Find “Batteries”, and Add Widget

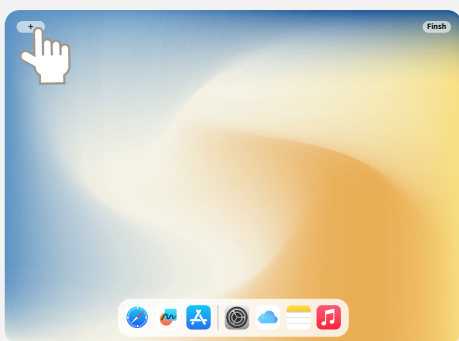

Picture

Sleep

Batteries

Reminders

XX iPad	100%
XX AirPods Pro	100%
eiP Magnetix Keyboard	100%

+ Add Widget



**Q** : What can I do if the trackpad is a bit laggy?

**A** :

- Restart your iPad: Sometimes, a simple restart can resolve temporary performance issues.
- Adjust Trackpad Sensitivity: Go to Settings → General → Trackpad and experiment with different sensitivity settings. Find the sensitivity level that feels most comfortable and responsive to your touch.

**Q** : The LED indicator did not light up when the keyboard was turned on.

**A** : The keyboard battery is likely empty. Please charge the keyboard for at least 2 hours.

**Q** : How do I connect to the iPad?

**A** : Press “Fn” + “C.” You should see a flashing indicator. You can now connect the keyboard to your iPad.

**Q** : Pairing failed / Could not find “eiP Magnetix Keyboard” via Bluetooth.

**A** : Restart your iPad, turn off the keyboard, and then turn it on again. Try the pairing process again.

**Q** : How do I type emojis when the Globe key is turned off?

**A** : Press “Globe” + “E” to bring up the Emoji keyboard.

## Technical Specifications

Operating voltage	3.0 - 4.2 V	Low battery alarm	below 20%
Working Time with backlight	250 hr	Stand-by time	≤ 180 days
Working Time without backlight	5 hr	Stand-by time	2000 hr
Stand-by current	≤ 1mA	Keystroke	50 - 70 g
Battery capacity	500 mAh	Charging port	Type - C
Button life	3 million taps	Charging time	2 - 3 hr
Connection distance	≤ 10m	Wake-up time	≤ 2 seconds
Reconnect time	5 seconds	Operating temperature	-10°C ~ 55°C
Bluetooth Name	eiP Magnetix Keyboard		

## Safety Caution

1. Keep the item away from sharp objects.
2. Do not place heavy object on the keyboard.
3. Away from microwave items.
4. Do not force or distorted the keyboard.
5. Keep away from oil, chemical or other organic liquid, items.

## Contact us

**Lemeng Limited Company**

Website: [www.eipstore.com](http://www.eipstore.com)

Email: [service-us@lemeng.com.tw](mailto:service-us@lemeng.com.tw)

## What's in the box

- Magnetix Keyboard Case \*1
- Manual Card \*1
- Type-C Charging Cable (No Charger) \*1

## Touchpad Functions

- Please update to iPadOS version 17.6.1 or later to fully experience all trackpad gestures.
- If you experience issues such as lag or unresponsiveness with the trackpad, restarting your iPad should help improve the situation.

### Trackpad Gestures


### iOS System




Single Click - Press the trackpad with one finger until you feel a click




Click and Hold - Press and hold the trackpad with one finger

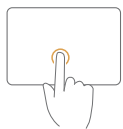

Wake iPad - Click the trackpad or press any key on your external keyboard




Search - Swipe down with two fingers on any Home screen




Notification Center - Move the pointer with one finger past the top of the screen near the middle.

### Trackpad Gestures


### iOS System



Scroll Up or Down - Swipe up or down with two fingers




Scroll Left or Right - Swipe left or right with two fingers



Go Home - Swiping up with three fingers



Today View - Get to the first Home screen, then swipe right with two fingers



App Switcher - Swipe up with three fingers, then pause before lifting them. As an alternative method, place four fingers near each other on the trackpad then bring them closer together, pausing before you lift the fingers